



LIVE TO PLAY LIVE® JIMDUNLOP.COM

925300166359E/C

OPERATION MANUAL

DVPIXL VOLUME (XL)TM PEDAL

DESCRIPTION

- Control volume levels or effects pedals with exacting precision
- Patented Low Friction Band-Drive for highly reliable action
- Fully adjustable rocker tension

DIRECTIONS

- We recommend placing the Volume (XL) at the beginning of your effects signal chain. Run a cable from your guitar to the Volume (XL)'s INPUT jack.
- Optional: Run a cable from the TUNER output to a tuner. Signal to tuner is active regardless of rocker position.

VOLUME MODE (250 kΩ POT)

- Run a cable from the Volume (XL)'s OUTPUT jack to your amplifier.
- With the pedal in full toe-down position, set your guitar and amp's maximum desired volume level.
- Move the rocker pedal toward the heel-down position to decrease the volume.
- The output signal will be muted when the rocker pedal reaches full heel-down position.

EXPRESSION MODE (10 kΩ POT)

- Run a stereo or TRS cable from the Volume (XL)'s FX jack to your effect pedal's expression jack.
- With the pedal in full toe-down position, set the effect parameter you want to control to the desired maximum level.
- Optional: To set the effect parameter's minimum level, use internal potentiometer toward the front of the pedal (remove bottom plate). Turn it clockwise to raise the minimum level or counterclockwise to lower it. Note: factory setting is fully counterclockwise.
- Move the rocker pedal toward the heel-down position to lower the value of the effect parameter within the range set by your effect pedal's control and the Volume (XL)'s internal potentiometer.
- When the rocker is fully heel-down, the effect parameter will be at the minimum value as set by the internal potentiometer.
- Optional: Use the internal blue push switch to reverse the function of heel and toe-down positions.

CONTROLS

- OUTPUT jack for volume signal control
- FX output for effect parameter control
- TUNER jack for constant signal to tuner
- INTERNAL 50 kΩ POT for setting minimum heel-down value, wired in series with expression pot
- INTERNAL SWITCH for reversing foot/heel polarity

ADJUSTABLE TORQUE

To adjust rocker pedal torque, place pedal in toe-down position. Insert a 1/4" flat blade screwdriver into torque adjust screw located under heel-end of rocker pedal. Turn clockwise to increase resistance or counterclockwise to decrease resistance.

POWER

The Volume (XL) is passive and does not require a power source to operate.

PEDAL DIMENSIONS

Height	3" (76.2 mm)
Width	4.5" (114.3 mm)
Length	11.5" (292.1 mm)
Weight	4 lbs. (1.814 kg)